

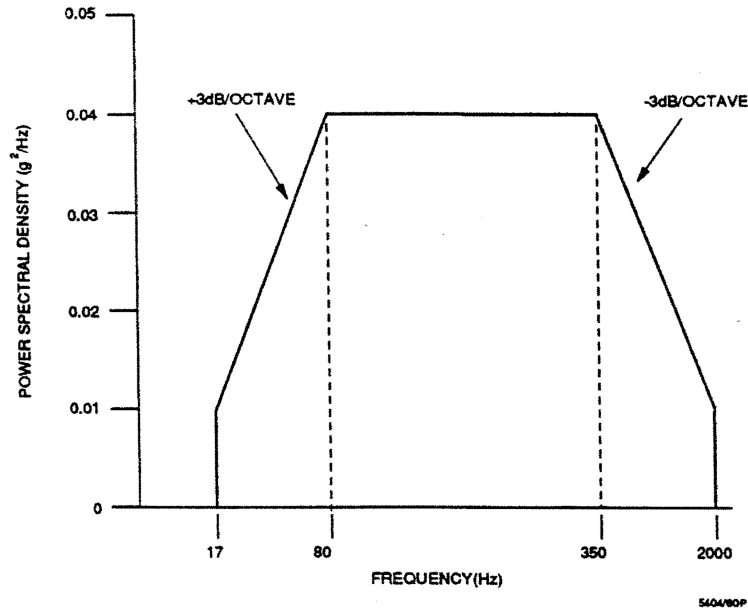


Figure 2-2 - Random Vibration Spectrum

2.1.3 Temperature

The temperature shall be cycled between the extremes of +55°C and -40°C with a rate of change of temperature of not less than 5 degrees C per minute, chamber air shall not be purged or dried.

The thermal cycle to be used for Burn-In is as shown in Figure 2-3.

The cycle duration shall be 8 hours with a dwell at high and low consistent to achieve thermal stabilisation of the equipment temperature at -40°C and +55°C to within 2°C.

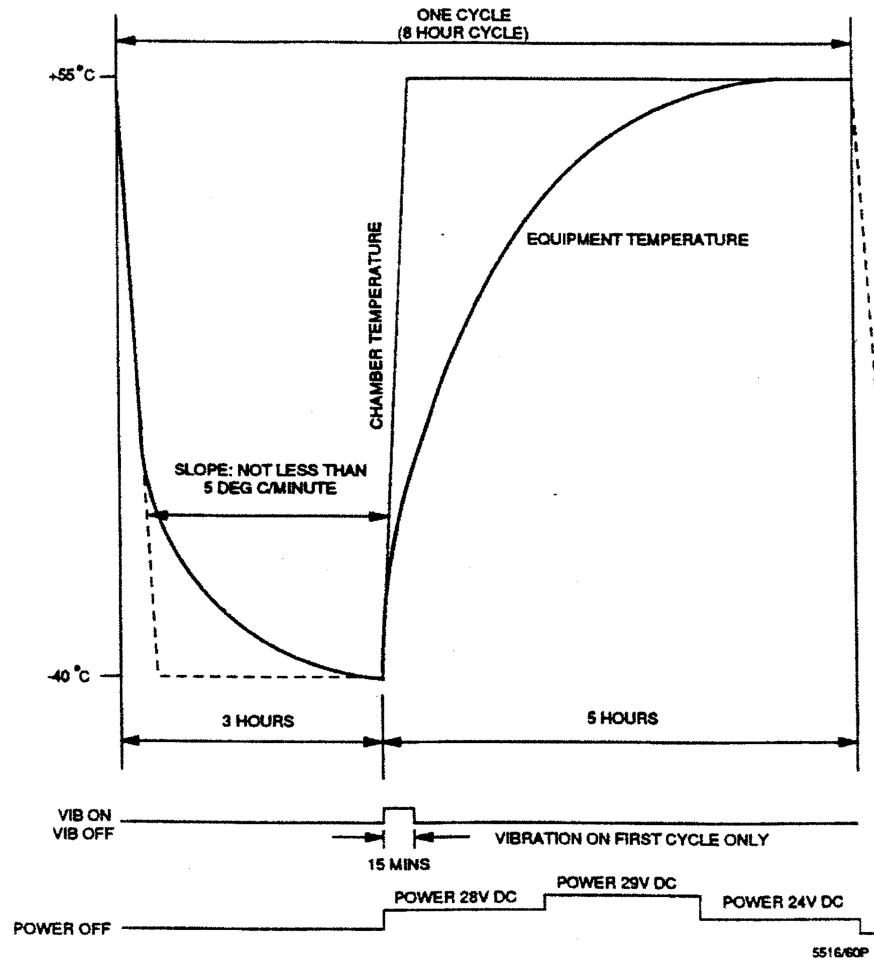


Figure 2-3 - The Burn-In Thermal Cycle